



Note: The station is not currently equipped with a power generator and hence will not operate during a power outage. Any future changes to make the station operational during a power outage will be based on Council decisions and direction.

Note: A 51 mm (2 inch) female cam-lock will be needed. Fittings are available or can be ordered by any plumbing store.



MILL POND BULK WATER FILLSTATION (OPERATING INSTRUCTIONS)

Notes: *The number on the FOB is also the PIN number and vehicle number, minus the first zero (e.g., 01001 only enter “1001” – four digits).
If a wrong number is entered, press “B” and start the sequence over again.*

1. Apply your “DRIVER KEY FOB’ to the Touch Reader
2. Press “B” Key - Enter your Vehicle number (VEH) (same as PIN)
3. Press “#” Key - Enter your Personal ID Number (PIN)
4. Press “*” Key - Enter the Preauthorized (PRE) amount of water required in litres.
(e.g., 4 = 4 L, 4,000 = 4,000 L)
5. Press “D” Key – Station will start dispensing the requested amount, or:
 - a. to the pre-set max capacity of your vehicle; or
 - b. to your credit available (whichever is the smaller amount).

Display will show the amount accurately dispensed as water is flowing in cubic metres.
Example 1.00 = 1 cubic metre = 1,000 litres.

**PRESS THE RED BUTTON AT ANYTIME
TO STOP THE TRANSACTION**